## "HOW TO CHANGE SIMCARD FOR FOX ELOADING ANDROID VERSION"

## WHAT TO DO:

- Login E-loading online portal at dafoxtech.com.
- Revoke E-loading machine in Online portal.
- Screenshot E-loading activation code. (You can find in machine activations).
- Remove sim card in android that inserted in E-loading machine.
- Change new sim card.
  - Note: (Load at least 10 regular load in New sim card before Reactivate the machine)
- Reactivate E-loading machine.
- 1. Login E-loading Online portal. And Revoke e-loading machine. Search in Browser/Chrome (www.dafoxtech.com)





## 2. Revoke E-loading machine in Online portal.

$\leftarrow \rightarrow$ C $\bigcirc$ htt	ps://www.dafoxtech.com/portal		A <sup>N</sup> Q
DAFOX TECH.		3	
🍄 Dashboard	Dashboard	С	
		R	
Transactions	Total Wallet Balance: Activation Credits:		
🗮 Wallet Logs	P4.85 0 Use for activating regular eload retailer. To	0	
Machines/Activations	activate retailer, visit this commands/guides		
Deployick Wallet	and search for Act	L	
Carreptenish wattet			
E-Load Products	Eload Sales Graph	L	
	10/01/2022 🗐 10/19/2022 🗐 Submit Reset		
✓> Commands			
	Gross Sales:		
	P0.00	U	
	search result)	0	
	N	data	
		w	
			A stilling to
			Go to Setti
	WALLET DED	OCTIONS GRAFT	



**3.** After revoke find MACHINE ACTIVATIONS and screenshot activation code.



4. Remove old sim card in the android phone & replace with the new sim card.





Make to load at least regular 10 before reactivating the new simcard using the activation code that you revoked earlier. 5. Reactivate E-loading machine.

Open E-loading app in phone that use in vendo machine.



