## HOW TO ACTIVATE E-LOADING VENDO MACHINE V2 (KEYPAD/NON-ANDROID)

## What to do:

- Login online portal (Using Trusted phone number).
- Once you login in portal, scroll down and click machine licenses.
- Once you click machine licenses, find activation code and click activate.
- Input Name/Alias of the machine name and Input sim number that inserted in machine number (inserted in GSM module).
- Test purchase in E-loading Vendo machine to successfully activate the E-loading vendo machine v2.

## 1. Login Online portal (www.dafoxtech.com/portal)



Sign In	
A One Time Pin code will be sent to the phone you entered if it exists on our system. Make sure you entered the correct number.	
Enter Trusted Number:	
Enter OTP Code:	
	Input OTP code.
If you didn't receive the OTP, after <b>595 Log in</b>	

2. Scroll down and click Machine Licenses.



3. You can find the activation code under the Licenses (ex. DF7878\*\*\*\*)





4. Input Name/Alias of the machine name and Input sim number that is inserted in the vendo machine (inserted in GSM module).

Activate License ****** <b>PQD6P98</b>	×	
Machine type		
Offline Machine V2 (Stand-alone Non-Android)	~	
Name/Alias:		
		Input Alias of the machine.
Gateway type		(Alias is under the
Shortcode	~	usually just the machine
Network	5	number)
GLOBE	~	
Machine Number:		Input sim number that insert
09xxxxxxxx		in GSM module.
Submit		(0.000000000000)

5. Test purchase of any amount in the machine to successfully activate the E-loading vendo machine v2.



6. Go back to Online portal to double-check if the code is successfully activated.

